

CYLINDERS (SPM: Slope Pendant Mount) INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

GENERAL:

1. Luminaire must be installed by licensed electrician.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
3. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
4. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.



INSTALLATION INSTRUCTIONS:

NOTE: Pendants with a standard 18" Stem come preassembled. These luminaires are intended to be mounted to a standard sized metal J-box. The box must be directly supported by the building structure.

- 1) Disconnect all power sources before attempting to install.
- 2) Remove Mounting Bracket by loosening (2) 3/32" Hex drive 5mm Set Screws. Fig 1.
- 3) Then attach the Mounting Bracket to a recessed octagonal J-box. Fig 2.
- 4) Align slot on the ball joint with the downward slope if needed. Fig 3.
- 5) Complete the wiring connections from the luminaire to the Lead Wires at the J-box using Silicone Wire Nuts (by others) and following NEC and local codes. Black (Line), White (Neutral), Green (Ground), 0-10V Dimming option: Violet (+) dimming, Pink (-) dimming.
- 6) Re-attach AS Cover and luminaire to Mounting Bracket with (2) 3/32" Hex drive 5mm Set Screws and torque each to 80 lbf-in (0.7 lbf-ft) [0.9 N-m].
- 7) Restore power to circuit then test luminaire.

NOTE: LED lamping is integral and NOT intended for general servicing.

DETAILED ILLUSTRATION

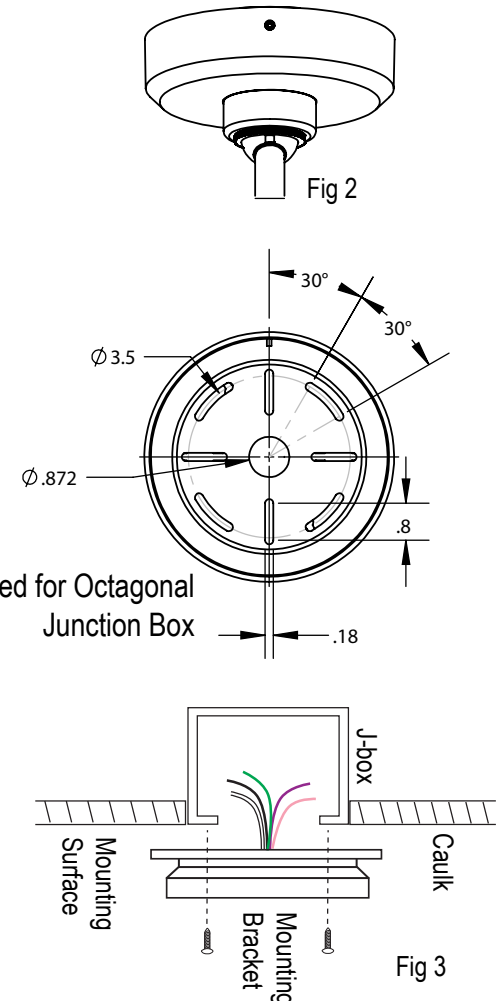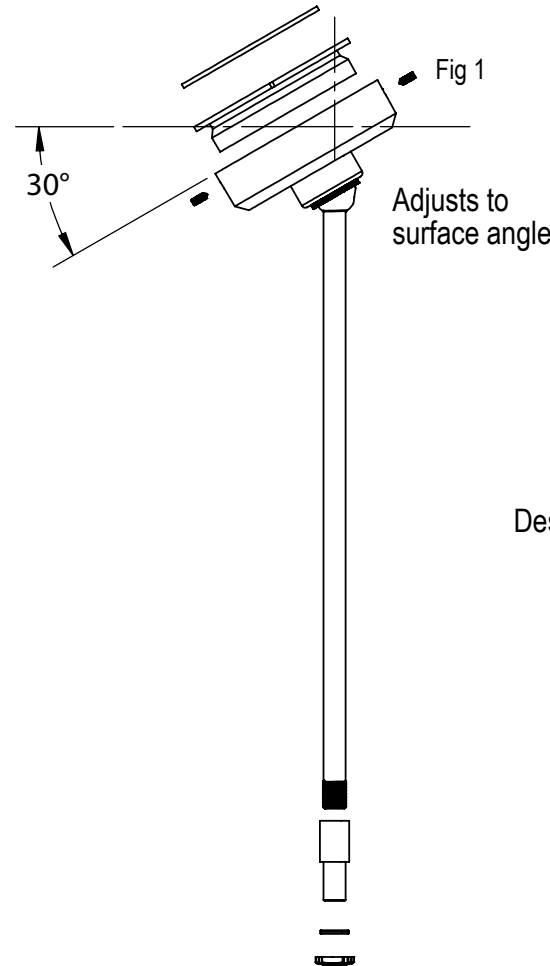

Wiring Identification

Luminaire Power	White - Neutral
	Black - Hot/Line
	Green - Ground
0-10V Dimming	Purple - + 0-10V
	Pink - - 0-10V

CYLINDERS (SPM: Slope Pendant Mount) PARTS LIST

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

GENERAL:

1. Luminaire must be installed by licensed electrician.
2. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
3. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
4. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

PARTS LIST:

ITEM NO.	DESCRIPTION
1	Slope Mount Assembly
2	Coupler
3	Nut
4	O-Ring
5	Canopy Mounting Plate
6	Canopy J-Box Gasket
7	Canopy Cover
16 QTY	SSCP 10-32 X 1/2 S/S Screws

